

- 4) WHEN USING ALTERNATE WATER CONNECTIONS, THE LEFT HAND AIR INTAKE CONNECTION CANNOT BE USED.
- 5) EXHAUST CONNECTION, AIR INTAKE CONNECTION, AND CONDENSATE TRAP ARE INCLUDED SEPARATELY IN SHIPMENT.
- 6) RELIEF VALVE, LOW WATER CUT-OFF, PRESS,/TEMP GAUGE, AQUASTAT, AND THE 2-1/2" PIPE MANIFOLD FOR THESE COMPONENTS ARE INCLUDED SEPARATELY IN SHIPMENT.
- 7) WHEN USING THE AERCO CONDENSATE NEUTRALIZER TANK, FOR PROPER CONDENSATE DRAINAGE, THE NEUTRALIZER TANK MUST BE INSTALLED IN A PIT OR THE BOILER AND THE AERCO CONDENSATE TRAP MUST BE ELEVATED HIGHER THAN 4" ABOVE THE FLOOR. SEE CONDENSATE TANK INSTRUCTIONS TID-0074 FOR DETAILS.



MLX EXT 321-1123/450-1100 MBH GAS FIRED BOILERS DIMENSIONAL DRAWINGS

DWN.BY_PR_DATE 060413
SCALESIZE _A
CHKDAPPD
REV DATE K.S. 020717

AP-A-927

REV.