

NOTES:

- 1. FOR ACTUAL SIZES AND LOCATIONS OF PIPING AND OTHER CONNECTIONS TO THE HEATER, SEE DIMENSIONAL DRAWING.
- 2. SHELL DRAIN VALVE AND CONDENSATE HOSE SHOULD BE ARRANGED TO PERMIT THE FLUIDS TO DRAIN FREELY, BY GRAVITY, TO A FLOOR DRAIN. RELIEF VALVE DISCHARGE SHOULD BE PIPED TO THE NEAREST FLOOR DRAIN. WHEN NO FLOOR DRAIN IS AVAILABLE, THE RELIEF VALVE DISCHARGE SHOULD BE PIPED VERTICALLY TO A HEIGHT 18" ABOVE THE FLOOR.
- 3. ALL (*) ITEMS ARE INCLUDED SEPARATELY IN SHIPMENT.
- 4. THIS IS A TYPICAL INSTALLATION DRAWING. LOCAL CODES AND AUTHORITIES SHOULD BE CONSULTED.
- 5. LOCATE WATER INLET AND OUTLET FITTINGS (i.e.UNIONS, ELBOWS, ETC.) A MINIMUM OF 6" FROM HEATER FITTINGS, TO PREVENT INTERFERENCE WITH REMOVAL OF BOILER PANELS AND COVERS. ALL PIPING AND ELECTRIC CONNECTIONS (SERVICE SWITCHES, CONDUIT BOXES) SHOULD LIKEWISE BE 6" AWAY FROM SIDE PANELS.
- 6. WHEN USING THE AERCO CONDENSATE NEUTRALIZER TANK, FOR PROPER CONDENSATE DRAINAGE, THE NEUTRALIZER TANK MUST BE INSTALLED IN A PIT <u>OR</u> THE BOILER AND THE AERCO CONDENSATE TRAP MUST BE ELEVATED HIGHER THAN 4" ABOVE THE FLOOR. SEE CONDENSATE TANK INSTRUCTIONS TID—0074 FOR DETAILS.
- 7. REVIEW BENCHMARK GAS SUPPLY DESIGN GUIDE GF-2030 FOR GAS PIPING INSTALLATION INSTRUCTIONS.
- 8. CONSULT AERCO FOR ADDITIONAL INFORMATION OR DIFFERENT DESIGN CONDITIONS.
- 9. SECONDARY INLET IS OPTIONAL. FEATURE CAN BE SELECTED WHEN CONFIGURING A BOILER ORDER.



100 ORITANI DRIVE BLAUVELT, NY 10913 aerco.com

BENCHMARK® 1500-3000 MBH PRIMARY SECONDARY INSTALLATION

DWN.BY <u>K.S.</u> DATE 120412 SCALE <u>NTS</u> REV.BY <u>K.S.</u> DATE 062023

SD-A-959

REV D