

- AIR INTAKE IS ON THE LEFT HAND SIDE ONLY
- 3. WHEN USING THE AERCO CONDENSATE NEUTRALIZER TANK, FOR PROPER CONDENSATE DRAINAGE, THE NEUTRALIZER TANK MUST BE INSTALLED IN A PIT OR THE BOILER AND THE AERCO CONDENSATE TRAP MUST BE ELEVATED HIGHER THAN 4" ABOVE THE FLOOR. SEE CONDENSATE TANK INSTRUCTIONS TID-0074 FOR DETAILS.
- 4. WHEN UTILIZING SEALED COMBUSTION, LEFT HAND EXHAUST CONNECTION CAN NOT BE USED.
- TYPICAL SEALED COMBUSTION INSTALLATION SHOWN.
- INTAKE CONNECTION SIZES:
  - DIM. "A" IS 8.0" APPROX. FOR MODELS 321-641/450-600, USING 4" PIPING WITH TYPICAL 4" PVC ELBOW IS 6.85".
  - DIM. "A" IS 11.5" APPROX. FOR MODELS 802-1123/800-1100, USING 6" PIPING WITH TYPICAL 6" PVC ELBOW IS 10.63".



100 ORITANI DRIVE BLAUVELT, NY 10913

MODULEX EXT 321-1123/450-1100 MBH GAS FIRED BOILER MULTIPLE UNIT INSTALLATION CLEARANCES

DWN.BY K.S. DATE 052013 SCALE NTS REV.DATE K.S. 020717

REV. В SD-A-968