



MOTORIZED VALVE INSTALLATION NOTES:

- 1) THE BELIMO MOTORIZED VALVES OFFERED BY AERCO DO NOT QUALIFY AS SERVICE VALVES. A SEPARATE SERVICE VALVE MUST BE INSTALLED FOR EACH BOILER.
- 2) DO NOT INSTALL THE MOTORIZED VALVES DIRECTLY AGAINST THE OUTLET OF THE BOILERS.
- 3) PROVIDE AMPLE CLEARANCE FROM VENTING, WATER PIPING, GAS PIPING, ELECTRICAL, CONTROLS, AND OTHER SYSTEM COMPONENTS. THE VALVE SHOULD BE INSTALLED WITH A REASONABLE AMOUNT OF "WORKING ROOM" AROUND IT TO ALLOW ROOM TO BE ABLE TO SERVICE THE VALVE AND USE THE MANUAL LEVER.
- 4) THE VALVE CAN BE ORIENTED IN ANY POSITION AS LONG AS THE ACTUATOR DOES NOT GO BELOW THE HORIZONTAL PLANE. SEE ORIENTATION GUIDE FROM BELIMO (ATTACHED WITH THE VALVE)
- 5) THIS IS A TYPICAL INSTALLATION DRAWING. LOCAL CODES AND AUTHORITIES SHOULD BE CONSULTED.
- 6) SEE TECHNICAL INSTRUCTIONS DOCUMENT TID-0028 FOR ADDITIONAL INFORMATION.
- 7) SEE SPECIFIC BENCHMARK BOILER PIPING DIAGRAM FOR THE REST OF PIPING DETAILS.

AERCO INTERNATIONAL, INC. NORTHVALE, NJ 07647		
MULTIPLE BOILER PIPING WITH BELIMO MOTORIZED VALVE (BENCHMARK BOILERS)		
DWN. BY <u>CZ</u> DATE <u>060611</u>	SD-A-865	REV
SCALE <u>NTS</u>		A
APPD. _____ DATE _____		